

HARD Shelter Erection Process



1



2



3



4



5



6



7



8



9



10



11




12



13



14

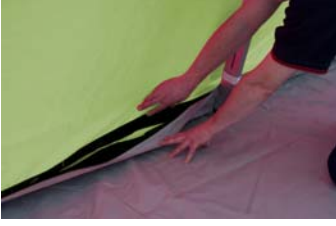

15



16



17



18

Decon POD Installation



1



2



3



4



5



6



7



8



9



10



11



12



13



14



15



16



17



18